

vtech[®]

Parent's Guide

Latches & Doors Busy Board™

 


INTRODUCTION

Thank you for purchasing the **Latches & Doors Busy Board™**.

Discover something new behind the doors and windows. With different modes, your child can enjoy the music and learn about family members, animals, objects and more.

Three Song Buttons

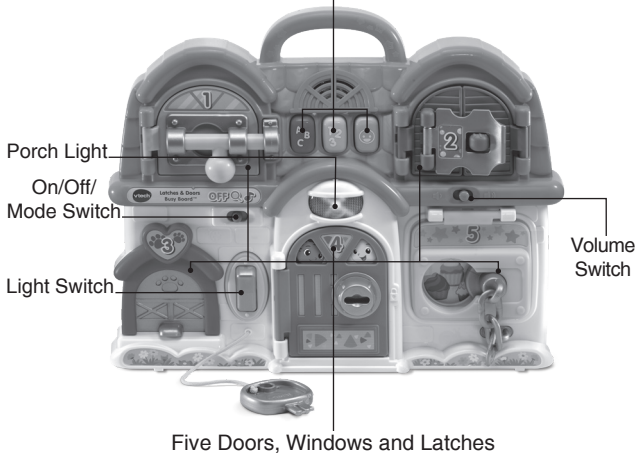

INCLUDED IN THIS PACKAGE

- One **Latches & Doors Busy Board™**
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

 
ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the packaging locks:

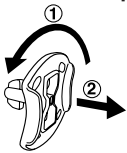


① Rotate the packaging locks 90 degrees counterlockwise.

② Pull out and discard the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

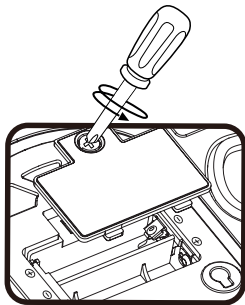

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. On/Off/Mode Switch

To turn the unit **ON**, slide the **On/Off/Mode Switch** to Learning mode (🗨️) or Sounds & Music mode (🎵).

To turn the unit **OFF**, slide the **On/Off/Mode Switch** to the **OFF** position.



2. Volume Switch

To adjust the volume, slide the **Volume Switch** to the **Low Volume** (🔊) or **High Volume** (🔊) position.

3. Song Buttons

Press the **Song Buttons** to hear songs about letters, numbers and the house.



4. Doors, Windows and Latches

Use the **Latches** to open the **Doors and Windows** and learn about family members, animals and objects in Learning mode, or hear melodies and sound effects in Sounds & Music mode.



 
5. Light Switch

Press the bottom part of the **Light Switch** to turn off the porch light. Press the upper part of the **Light Switch** to turn on the porch light.



6. Porch Light

The **Porch Light** will flash with the voice responses when the **Song Buttons** are pressed or the **Doors and Windows** are opened.

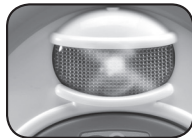

7. Automatic Shut Off

To preserve battery life, the **Latches & Doors Busy Board™** will automatically power down after several minutes without input. The unit can be turned on again by sliding the **On/Off/Mode Switch**, by opening/closing the **Doors and Windows** or pressing any button.

ACTIVITIES

1. Learning Mode

Open the **Doors and Windows** to discover something new and learn about family members, animals and objects hiding behind them. Press the **Song Buttons** to hear playful learning songs.



2. Sounds & Music Mode

Open the **Doors and Windows** to hear melodies and sound effects. Press the **Song Buttons** to hear playful learning songs.



Sing-Along Song Lyrics

Song 1

Sing along and count with me,

1 - 2 - 3 - 4 and 5.

Sing along and count with me,

1-2-3-4-5.

Song 2

Let's play and explore.

Open and close each door.

There's so much we can do and see,

With all our friends and family,

Let's learn and play some more.

SONG LIST

1. Ring Around the Rosy
2. Do You Know the Muffin Man?
3. Diddle, Diddle Dumpling
4. Glow Worm
5. Goosey, Goosey Gander
6. One Man Went to Mow a Meadow
7. Alouette
8. A-Tisket, A-Tasket
9. Hot Cross Buns
10. Sing a Song of Sixpence
11. ABC Song

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5174
Product name:	Latches & Doors Busy Board™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003671-000^{US}