

vtech[®]
baby

Parent's Guide

Take Along Tunes Radio



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Take Along Tunes Radio!**

This baby boombox themed music player is great way to introduce little one to the world of music! Press the instrument buttons to hear musical instruments, turn the dial to learn about animals and numbers and turn the music disc to listen to different music.

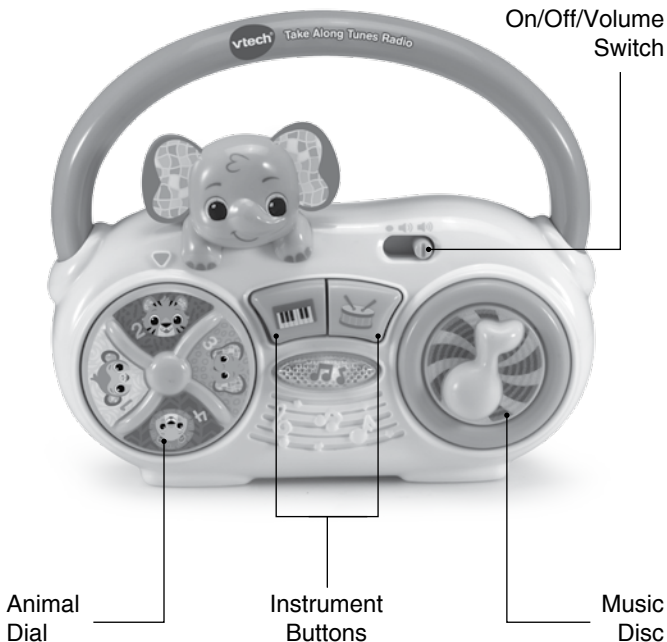

INCLUDED IN THIS PACKAGE

- One **Take Along Tunes Radio**
- One Parent's Guide

WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE

Please keep this Parent's Guide as it contains important information.

NOTE

This toy is not intended for teething.

Removing the Packaging Locks:

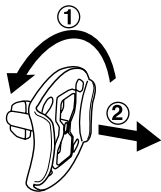


- ① Rotate the packaging locks anticlockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and remove the cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure the battery cover.

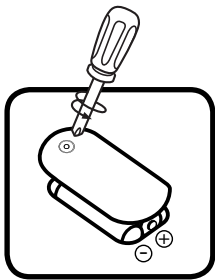

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.


In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the **Low Volume** (🔊)) position or the **High Volume** (🔊)) position. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** (●) position.

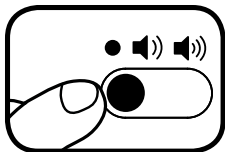

2. AUTOMATIC SHUT-OFF

To preserve battery life, the **Take Along Tunes Radio** will automatically power-down after approximately 45 seconds without input. The unit can only be turned on again by pressing the instrument buttons, or by turning the animal dial or the music disc.

Note:

If the unit powers down whilst playing, please install a new set of batteries.

ACTIVITIES

1. Instrument Buttons

Press the **Instrument Buttons** to learn instrument names and sounds. The light will flash with the sounds.



2. Animal Dial

Turn the **Animal Dial** to learn animal names, animal sounds, numbers and counting. When a melody is playing, turn the dial to hear animal sounds on the top of the melody. The light will flash with the sounds.



3. Music Disc

Turn the **Music Disc** to hear playful songs and melodies. When a song or melody is playing, turn the **Music Disc** to hear fun sounds on the top of the song or melody. The light will flash with the sounds.



SING-ALONG SONG LYRICS

Song 1

Let's dance to the music, move your body to the beat.
Sing with the music and tap your feet.
Wiggle, wiggle, shake it, shake it, dancin' n' movin'!
Come on everybody, let's get groovin'!

Song 2

One, two, three, four and five,
It's time to come alive,
Tap, snap, and clap along!
Tap the beat with your feet!

Song 3

I play songs and music,
We can sing together.

MELODY LIST

(Country Music)

1. Oats, Peas, Beans and Barley Grow
2. Daring Young Man on the Flying Trapeze
3. Diddle Diddle Dumpling
4. Hey Diddle Diddle
5. Where Has My Little Dog Gone
6. Old MacDonald
7. Aiken Drum
8. On Top Of Old Smokey
9. One Man Went To Mow
10. Do You Know the Muffin Man?
11. Here We Go Round The Mulberry Bush
12. Little Bo Peep
13. Looby Loo
14. Skip to My Lou
15. Bicycle Made For Two

(Pop Music)

16. Entertainer
17. Toyland
18. Yankee Doodle
19. Alphabet Song
20. Bingo
21. Glow Worm
22. Au Clair de la Lune
23. For He's A Jolly Good Fellow
24. MacNamara's Band
25. Pussy Cat, Pussy Cat
26. Humpty Dumpty
27. Riddle Song
28. Pat-a-cake
29. Polly Put the Kettle On
30. Hickory Dickory Dock

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003945-001 