

vtech[®]

Instruction Manual

Hover Pup[™]



INTRODUCTION

Thank you for purchasing the **Hover Pup™**.

Follow this cute pup for three ways to play! Explore numbers and counting with floor play, then get up and dance with this interactive friend. Keep the giggles going with a game of follow the leader.



INCLUDED IN THE PACKAGE

- Hover Pup™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks

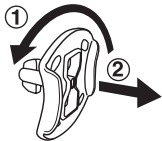

- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

NOTE

Please cut and discard the plastic strap that attaches the **Hover Pup™** to the box. The strap is not part of this toy and should be discarded for your child's safety.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the two battery covers located on the bottom of the unit, use a screwdriver to loosen the screws and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA batteries following the diagram inside the battery boxes. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery covers and tighten the screws to secure.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES




- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Mode Selector

To turn the unit **On**, slide the **On/Off/Mode Selector** to Learning mode  or Follow mode  position. You will hear a song, playful phrases and sounds. To turn the unit **Off**, slide the **On/Off/Mode Selector** to the **Off**  position.



2. Automatic Shut-Off

To preserve battery life, the **Hover Puppy™** will automatically shut off after approximately 50 seconds without input or if the front and back sensors are activated continuously for 10 minutes. The unit can be turned on again by pressing any button or sliding the **On/Off/Mode Selector**.

NOTE

This product is in Try-Me mode in the packaging. After opening the package, please remove the demo tag from the bottom of the unit. Turn **Hover Pup™** off and on again to proceed with normal play. If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES


1. Light-Up Buttons

Press the **Light-Up Buttons** to learn numbers, counting, feelings and motions, and hear sing-along songs and music. The puppy will dance and move in response to the voice and sound responses if it is on the floor. The lights will flash with the sounds.



2. Hand Button

Give puppy a high five by pressing the **Hand Button** and hear playful phrases and music. The lights will flash with the sounds.

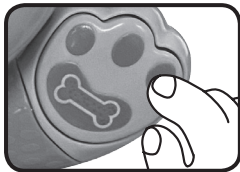

3. Front and Back Sensors

The puppy is equipped with special sensors on the front and back of the hoverboard. Come near the sensors to activate them and see the puppy ride away or rotate and respond with playful phrases, music and sounds. The lights will flash with the sounds.



NOTE

The infrared light sensors in the hoverboard are sensitive to sunlight. The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.

4. Pick-Up Sensor

The puppy has a special sensor on the bottom of the hoverboard and knows when it has been picked up. Each time you pick up the puppy, you will hear a cute phrase. The puppy's heart button will flash with the sounds.



MELODY LIST

1. A-Tisket, A-Tasket
2. Bingo
3. The Entertainer
4. Glow Worm

5. Hey, Diddle Diddle
6. Skip to My Lou
7. One Man Went to Mow a Meadow
8. Hickory, Dickory, Dock
9. Aiken Drum
10. Bear Went Over the Mountain
11. Did You Ever See a Lassie?
12. Where Has My Little Dog Gone?
13. Old MacDonald
14. Humpty Dumpty
15. The Wheels on the Bus

SONG LYRICS

Song 1

Follow me, one, two, three.

I am moving really fast, can you catch me?

Song 2

Ride, ride, ride my board,

Turning round and round.

I like to move, I like to groove,

Every day and night.

Song 3

I hop on to my hoverboard and zoom around the ground.

I wiggle my body, I wag my ears and spin all around.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

| | |
|--------------------|---|
| Trade Name: | VTech® |
| Model: | 5475 |
| Product Name: | Hover Pup™ |
| Responsible Party: | VTech Electronics North America, LLC |
| Address: | 1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004 |
| Website: | vtechkids.com |

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2021 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-004015-000 (US) (CA)