

vtech[®]

Parent's Guide

Explore & Crawl Elephant[™]



INTRODUCTION

Thank you for purchasing the **Explore & Crawl Elephant™**. Snuggle up to the colorful, plush elephant and press any button to watch the elephant's ears flap as he crawls away. This adorable elephant introduces numbers, colors, songs and music and inspires little ones to walk and crawl after her.

Number Button

 
Light-Up Star Button

Music Button

Flapping Ears

Elephant Button

On/Off/Volume Selector

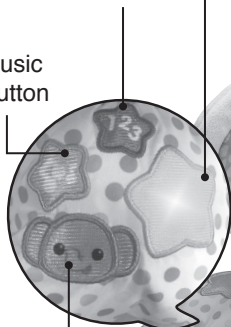

INCLUDED IN THIS PACKAGE

- Explore & Crawl Elephant™
- Parent's guide

WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Locks

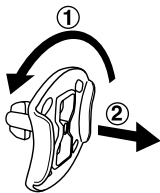


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the elephant's tummy and use a screwdriver to loosen the screw and open the battery cover.
3. Remove the old batteries by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

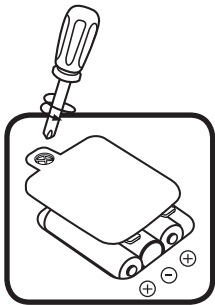

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de nonutilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume **)** or the High volume **))** position. You will hear a song, a phrase and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off ●** position.

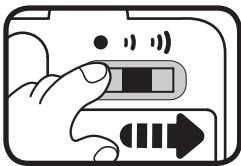

2. Automatic Shut-Off

To preserve battery life, the **Explore & Crawl Elephant™** will automatically shut off after 20 seconds without input. The unit can be turned on again by pressing any button.

NOTE

This product is in Try-Me mode in the packaging. After opening the package, turn the **Explore & Crawl Elephant™** off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

 
NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES


1. Elephant Button

Press the **Elephant** button to hear fun sounds and phrases. The elephant will flap its ears and crawl forward.

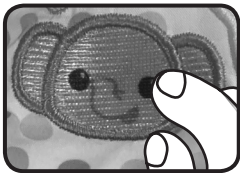


2. Music Button

 Press the **Music** button to hear playful melodies and songs. The elephant will flap its ears and crawl forward.

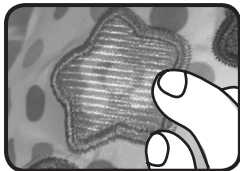


3. Number Button

 Press the **Number** button to learn numbers, body parts and the color of the shape. The elephant will flap its ears and move forward during the playful number song.

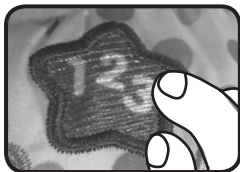

4. Light-Up Star Button

 Press the **Light-Up Star** button to hear fun sounds, phrases and a playful song that encourage interaction and crawling. The elephant will flap its ears and move forward during the playful sounds, song and short tunes. The light will flash with the sounds.

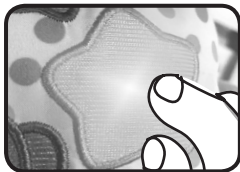

SONG LYRICS

Song 1

I like to crawl along,
It's fun to crawl with you.
I like to explore the world,
To explore and play with you.

Song 2

It's time to explore the big world. The big world.
Let's crawl and explore together. Together.
Let's move along and see, what a thrill it is to me. Let's go!

Song 3

Here we go, one leg in.
Here we go, two legs out.
Here we go, three legs in.
All four legs are ready to crawl.

MELODY LIST

1. Bingo
2. Mary Had a Little Lamb
3. Pat-a-Cake
4. Peas Porridge Hot
5. Skip to My Lou
6. This Old Man
7. A-Tisket A-Tasket
8. Three Little Kittens
9. To Market to Market
10. London Bridge
11. Hickory, Dickory, Dock
12. Au Clair de la Lune
13. Alouette
14. Oh, Susanna
15. Flight of the Bumble Bee

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5332
Product name: Explore & Crawl Elephant™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2020 VTech Holdings Limited.

All rights reserved.

Printed in China.

91-003811-000 