 



COZY-DOZYS

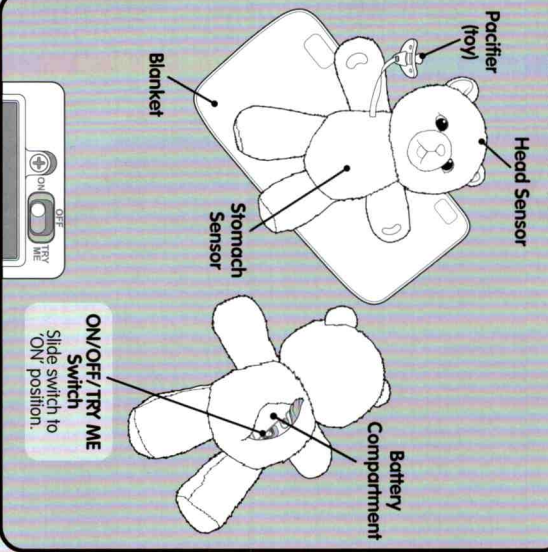


BATTERIES

Requires 2 x AA Batteries. (Demonstration Batteries Included). Phillips/cross head screwdriver (not included) needed to replace batteries.

 - Use new batteries to obtain best performance.
- Alkaline batteries recommended.
- Rechargeable batteries must only be recharged under adult supervision.
- Rechargeable batteries must be removed from the toy before recharging.
- Non-rechargeable batteries must not be recharged.
- Different types of batteries, or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries should be replaced by an adult.
- Batteries must be inserted following the correct polarity.
- Exhausted batteries should be removed from the product.
- The supply terminals must not be short-circuited.
- Batteries should be removed from the product when not in use.
- Do not dispose of batteries in fire.
- Batteries supplied are for demonstration purposes only and may require replacing within a short period of time.

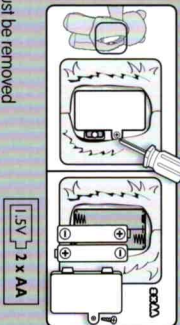

SOOTHE ME TO SLEEP

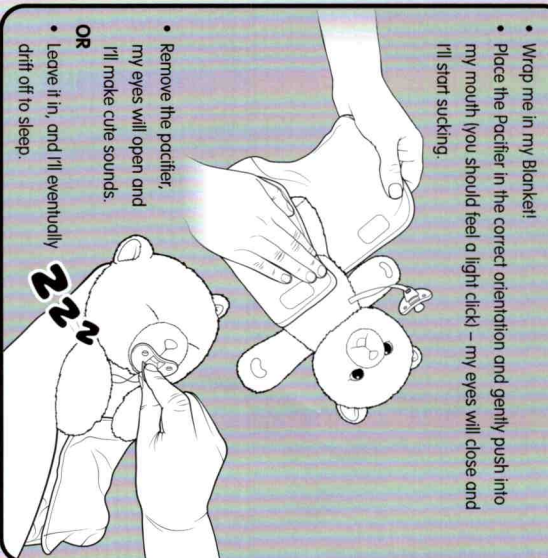 

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

WARNING: DO NOT PLAY SOUNDS CLOSE TO YOUR EAR! KEEP TOY AWAY FROM DIRECT HEAT. CAUTION: ADULT SUPERVISION SHOULD BE ENCOURAGED FOR YOUNG CHILDREN. READ ALL INSTRUCTIONS CAREFULLY BEFORE USING PRODUCT. INTERNAL ELECTRONICS. SURFACE WASH ONLY. IMPORTANT: DROPPING LITTLE LIVE PETS™ TOY MAY CAUSE DAMAGE THAT PREVENTS LITTLE LIVE PETS™ FUNCTIONS. PUSH TOY CONTENTS: POLYURETHANE FOAM, POLYESTER FIBRES. PUSH TOY COMPLIES WITH THE SAFETY REQUIREMENTS OF EN71 FOR AGES 3+.

WWW.LITTLELIVEPETS.COM

BATTERY RECYCLING INFORMATION

Help the environment by recycling batteries responsibly. The whole bin symbol indicates that batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and health. Please remove exhausted batteries from the product and use designated collection points or recycling facilities when disposing of batteries.



Imported by:
Character Ltd,
Lanes Brook, Lode, Lanes Road,
Cranford, Leicestershire, LE14 3LQ, UK.
Tel No: **0161 633 9808**
Made in China

www.character-online.co.uk

PROXY A/S
GOTTSCHEWEGE 13, 1ST FLOOR DK-1123
COPENHAGEN, DENMARK
WWW.PROXYAS.COM



- 1 x Cozy Dozys
- 1 x Blanket
- 1 x Pacifier (toy)
- 1 x Instruction booklet

28847-TO-RO

©2018 MOOSE.
MADE IN CHINA

COZY DOZYS

OVER 25 SOUNDS & REACTIONS

soothe me to sleep

FOR AGES 4+



Little Live

 
MOOSE

IMPORTANT: To benefit the most from your Cozy Dozys, please read this manual completely. Parental guidance is recommended.

INSTRUCTION BOOKLET

PET ME!

- Pet my head, my eyes will blink and I'll make contented sounds.

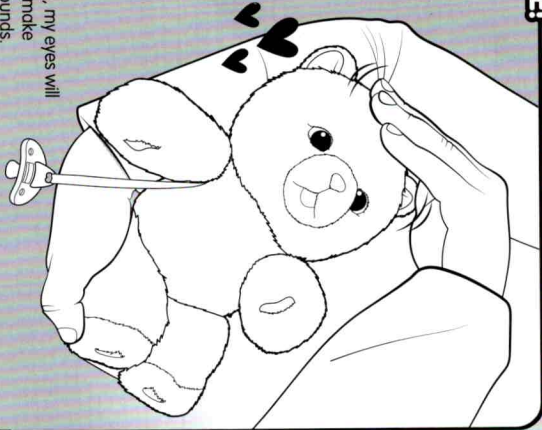

TICKLE ME!

- Tickle my tummy – my eyes will close, and I'll giggle.
- The more times you tickle me, the longer I'll laugh.



WAIT FOR ME TO FALL ASLEEP

- If you do nothing, I'll fall asleep after a few minutes.
 - You can wake me up at any time by:
 - Inserting my Pacifier.
- OR
- Moving switch from 'ON' to 'OFF', then back to 'ON'



TROUBLESHOOTING

For best performance and to avoid any potential malfunction

- Do not restrict movement of Eyes.
- Function does not match instructions.**
- Eyes move slowly, or not at all.**
 - Always ensure switch is 'ON', not in the 'OFF' or 'TRY ME' position. Batteries may be low. Low batteries may not allow full function. Replace both with fresh batteries as described in the 'Batteries' page of this manual. Always ensure they are placed in the correct polarity. Cozy Dozy may be in Sleep mode. In this case, turn 'OFF' and back to 'ON'.

Feeding does not work.

- Pacifier must be placed in the correct orientation – as pictured in the 'Soothe me to Sleep' page of this manual.
- The Pacifier has been designed to click into mouth - ensure you've pushed it all the way.
- Ensure you're not touching any of the sensors while attempting to feed.
- Petting or Ticking does not yield animations/sounds.**
 - Make sure switch is not in the 'TRY ME' position.
 - Make sure you're touching the Head or Stomach area directly.

- Ensure you're not touching both at the same time.

Short Battery Life

- Switch 'OFF' Cozy Dozy when not in use. If left on, sensors in Head and Stomach will remain active (waiting for touch). This will drain the battery faster.
- Do not restrict movement of eyes as this will shorten battery life.

CARE AND MAINTENANCE

After repeated play your Cozy Dozy may develop some dirt/marks on its soft surface. Gently brush with a clean cloth or soft brush and wipe off dirt immediately.

Do not use detergent or stain removers.

WARNING:

LITTLE LIVE™ COZY DOZYS CONTAINS ELECTRONICS; IMMERSING IN, OR PLACING UNDER RUNNING WATER/LIQUIDS MAY DAMAGE OR DESTROY PRODUCT.

SAFETY PRECAUTIONS

- Do not play in or around water.
- LITTLE LIVE™ Cozy Dozys contain electronics; immersing in or placing under running water/liquids is a hazard and may cause a malfunction, damage the electronics or destroy the product.
- This product is intended for indoor use only. Do not use outdoors - dirt, grass, cement will damage the finish and/or the sensors.
- Always turn off Cozy Dozys when not in use.
- High electrical interference (such as near a vacuum cleaner) may interfere with the toy's electronics. If the toy begins acting strangely it should be restarted.
- Move power switch to 'OFF' for about 20 seconds, then turn back 'ON'.
- If normal operation does not resume, move the product to another location and try again.
- Do not sleep with Cozy Dozys.