

vtech[®]

Parent's Guide

Singing Bird House



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years



 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Hello friend! Welcome to our house! Discover 3 musical instruments, sounds, colours and numbers with the **Singing Bird House** by **VTech**®! Put the cute baby birds in the nest to pop and spin them around for fun musical responses. The baby birds love to sing and will harmonise when placed into the nest one at a time.

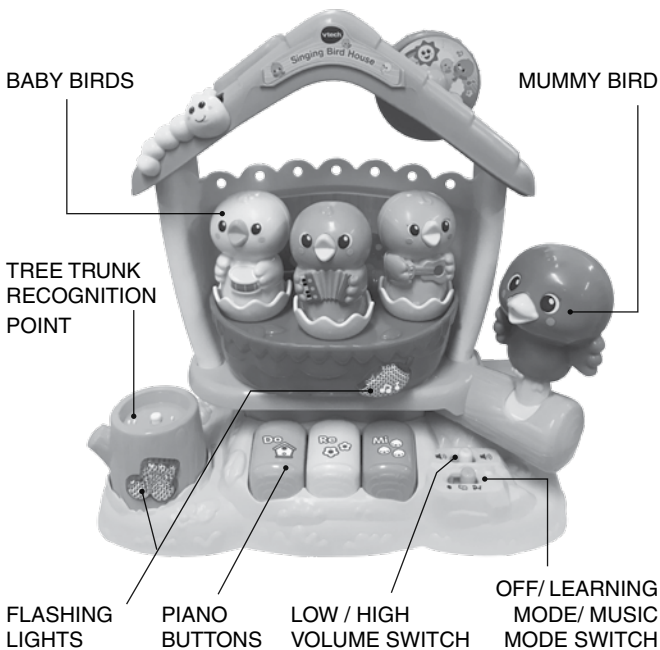


INCLUDED IN THIS PACKAGE

- One VTech® Singing Bird House learning toy!
- Three baby birds
- One parent's guide




WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

 Unlock the packaging locks:



   - ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

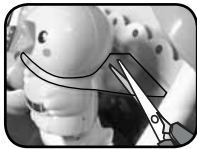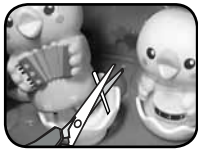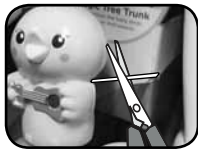


NOTE: Please cut and discard the cord and the transparent film that attaches the birds to the bird house. The cord and the transparent film are not part of this toy and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) battery following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

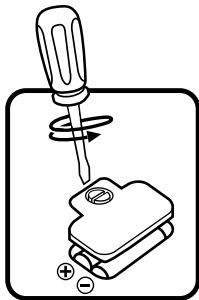

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.



For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. OFF / LEARNING MODE / MUSIC MODE SWITCH

To turn the unit **ON**, slide the **OFF / Learning Mode / Music Mode** switch to the **Learning Mode or Music Mode** ( ) position. To turn the unit **OFF**, slide the **OFF / Learning Mode / Music Mode** switch to the **OFF** (●) position.



 
2. AUTOMATIC SHUT OFF

To preserve battery life, the **VTech® Singing Bird House** will automatically power down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down quickly we suggest changing the batteries.

ACTIVITIES

1. Slide the **OFF / Learning Mode/ Music Mode switch** to choose a mode of play. You will hear a sing-along song and some phrases depending on the selected mode. The lights will flash along with the sounds.
2. Slide the **Low / High Volume Switch** to choose a suitable volume to play.
3. Press the three piano buttons to learn objects, feelings, sounds, melodies and more. In **Learning Mode** hear colours, objects and feelings. In **Music Mode** hear piano notes, fun melodies and sounds. In all modes, the lights will flash with the sounds.
4. Pull down the mummy bird to learn numbers, colours and counting in **Learning Mode** and hear fun songs and learn instruments in **Music Mode**.
5. Put the three baby birds in to the nest one at a time to learn numbers in **Learning Mode** and hear sing-along songs, melodies and sounds in **Music Mode**.

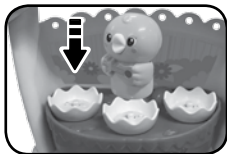

6. If there is no input after approximately 10 seconds, fun songs, questions or phrases will be played. If there is no input after another 10 seconds, encouraging phrases will be played. If there is still no input after another 10 seconds, the unit will play a short ending tune and the unit will go into sleep mode. The unit can be re-activated by pressing any of the three piano buttons or by moving any of the birds.

MELODY LIST

- 1 Twinkle, Twinkle Little Star
- 2 Humpty Dumpty
- 3 London Bridge
- 4 Hey Diddle Diddle
- 5 Goodnight Ladies
- 6 Farmer in the Dell
- 7 Old MacDonald
- 8 Turkey in the Straw
- 9 Chicken Reel
- 10 Bingo
- 11 My Bonnie Lies Over the Ocean
- 12 Row, Row, Row Your Boat
- 13 Skip To My Lou
- 14 Three Little Kittens
- 15 Yankee Doodle

SING-ALONG SONG LIST

SONG 1

Girls and boys, come and play.
We're ready to sing with you today.

SONG 2

A-tisket, a-tasket, three birdies in a basket.

Mumma's near by, she wants us to fly.

Adventure is awaiting!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003694-000 (UK)